



## Virtual Boy Set Up Instructions

NEO - STAR Video  
Virtual Boy Set Up Instructions

Inclosed in this shipment:

- 1 - Virtual Boy System w/Mario Tennis
- 1 - Two Sided Instruction sheet w/chain
- 1 - Security Chain w/Brackets

### Installation:

#### Step one: **Virtual Boy Set-Up**

Remove the Virtual Boy Unit from the packaging and following set up instructions enclosed with the system.

#### Step two: **Security**

Place the Virtual Boy System on the counter top were the unit is to be displayed(this must be a level surface). For the purpose of security we have enclosed a security chain w/brackets to be attached to the Virtual Boy head unit and counter top.

Remove the double sided tape backing material from the brackets at each end of the chain. Place one bracket on the bottom of the Virtual Boy head assembly just above where you insert the game cartridge(covering the bar code label). Place the other bracket behind or under counter top, so that is not visible to the consumer.

#### Step three: **Instruction Sheet placement**

Take the instruction sheet with chain and attach it to one leg of the Virtual Boy Stand. This is accomplished by opening the clasp on the chain and looping it around the leg and reconnecting the clasp.

For additional Technical Support on your Virtual Boy System call the Nintendo Display Hotline at 1-800-875-1852. We are open 7 days a week, 6:00am to 6:30pm PST

# Nintendo VIRTUAL BOY

# VIRTUAL BOY

## • ASSEMBLY INSTRUCTIONS . . .

 
1. After unpacking your VIRTUAL BOY PLATFORM DISPLAY from the shipping carton, place on top of DISPLAY STAND. Attached to the bottom of the DISPLAY are two (2) sheet metal SECURITY STRIPS. Align the DISPLAY on top of DISPLAY STAND, then insert two (2) bolts (supplied with DISPLAY STAND) up through the top of display stand and into the center holes in each SECURITY STRIP and secure (see **DETAIL 1**).
2. Pivot the upper portion of the SUPPORT ARM into a vertical position, then unlock the REAR LOCKING PLATE and swing open (see **FIGURE 1**).
3. Untape the CONTROL PLUG found within the REAR LOCKING PLATE. Plug in the CONTROL PLUG into HEAD SET (as shown in **DETAIL 2**). Position the HEAD SET on the top of the SUPPORT ARM making sure HEAD SET BASE fits securely onto SUPPORT ARM.
4. Make sure the GAME CARTRIDGE is fully seated within the HEAD SET (see **DETAIL 3**). **NOTE:** The GAME CARTRIDGE for your display can easily be changed by unlocking rear LOCKING PLATE, pulling out the cartridge, sliding in new cartridge with VIRTUAL BOY label facing up, then relock rear LOCKING PLATE.
5. Plug in the MAIN POWER CORD to the nearest grounded power source. The HEAD SET VOLUME CONTROL is found under the left side of head set and should be adjusted to desired volume (see **FIGURE 1**).
6. Position the HEAD SET LOCKING FOOT within upper portion of the SUPPORT ARM, then swing the REAR LOCKING PLATE back up into the closed position and lock into place (see **DETAIL 4**).
7. Remove KEY and keep in a safe place.

## • CLEANING INSTRUCTIONS . . .

1. Do not use any harsh abrasive cleaners. Use a soft cloth with warm water and a mild soap to clean.

For display service call  
DISPLAY HOTLINE  
1 - 800 - 875 - 1852

REAR  
LOCKING  
PLATE



**DETAIL**

MAIN  
POWER  
CORD



**FIGURE 1**



# Y PLATFORM DISPLAY

